



THERMOSTATS

Thermostats are located in the closet in the small meeting room. You may adjust the temperature as needed.

WHEN LEAVING - Please make sure both thermostats are set the same to the following settings and the closet door is locked.

60 degrees in the winter when heating.
80 degrees in the summer when cooling.